


INSTALLATION GUIDE
MONTAGEANLEITUNG
GUÍA DE INSTALACIÓN
GUIDE D'INSTALLATION
GUIDA ALL'INSTALLAZIONE
INSTALLATIE VOORSCHRIFT

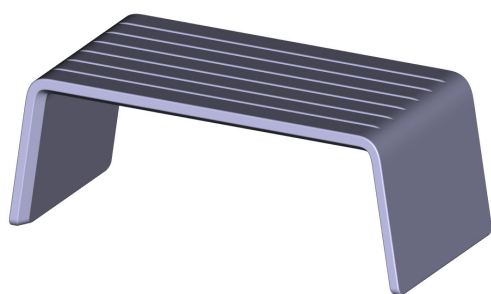

Bath Step
Badetritt
Escalon de Bano
Marchepied
Scalino do Bagno
Bad Opstap

For care and cleaning, product warranty, and additional information contact:

US Customers

U.S.A.
houseofrohl.com/support
1-800-777-9762

Canadian Customers

QUEBEC / MARITIMES / WESTERN CANADA
QUÉBEC / MARITIMES / OUEST CANADIEN
QUEBEC / MARITIMOS / CANADA OCCIDENTAL
houseofrohl.ca/support
1-866-473-8442

ONTARIO
houseofrohl.ca/support
1-800-287-5354

EMEA Customers

vandabaths.com
+44 (0) 1952 221 100

Riobel


PERRIN & ROWE®
LONDON




victoria ⊕ albert®

ROHL


Installation / Einrichtung / Instalación / Installation / Installazione / Installatie

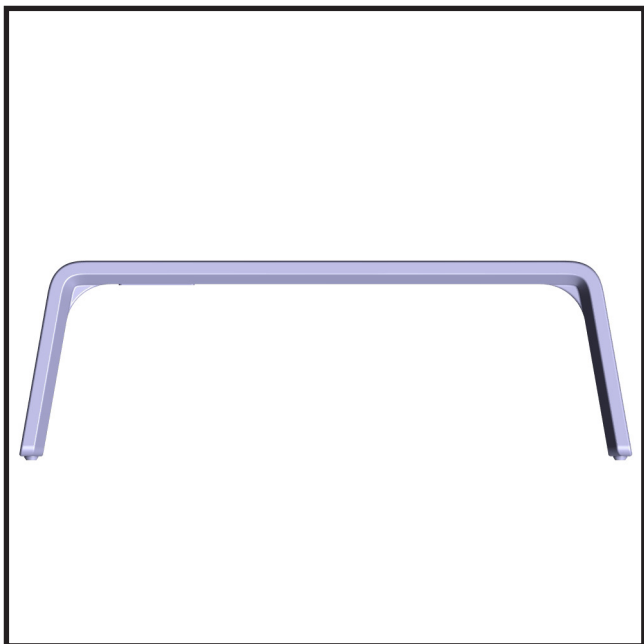

Side view
Seitenansicht
Vista lateral
Vue latérale
Vista laterale
Zijaanzicht

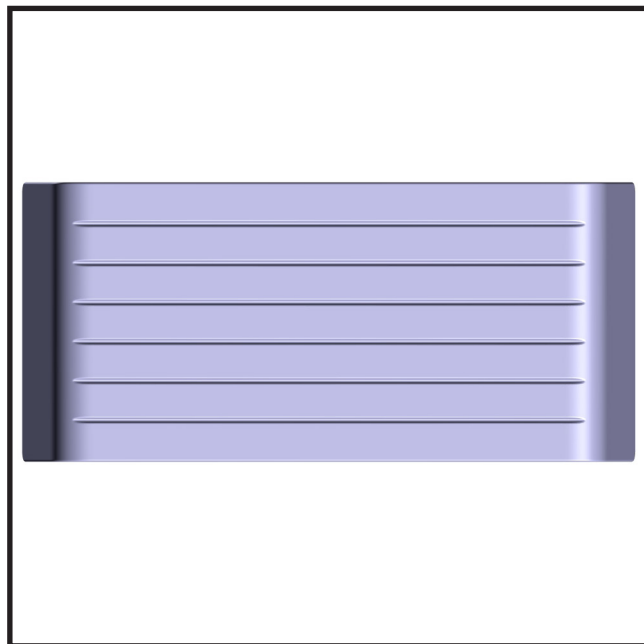


Top view
Ansicht von oben
Vista superior
Vue du dessus
Vista dall'alto
Bovenaanzicht

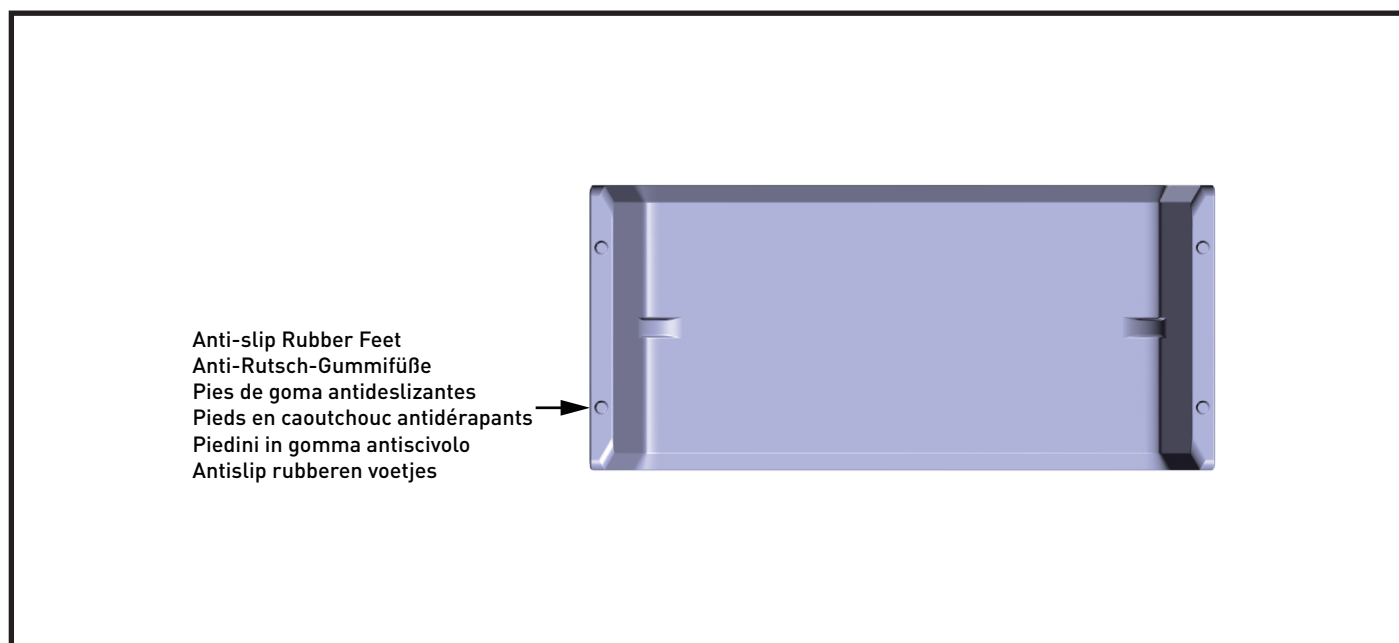

Anti-slip Rubber Feet
Anti-Rutsch-Gummifüße
Pies de goma antideslizantes
Pieds en caoutchouc antidérapants
Piedini in gomma antiscivolo
Antislip rubberen voetjes

Bottom view
Ansicht von unten
Vista inferior
Vue du dessous
Vista inferiore
Onderaanzicht

Installation / Einrichtung / Instalación / Installation / Installazione / Installatie

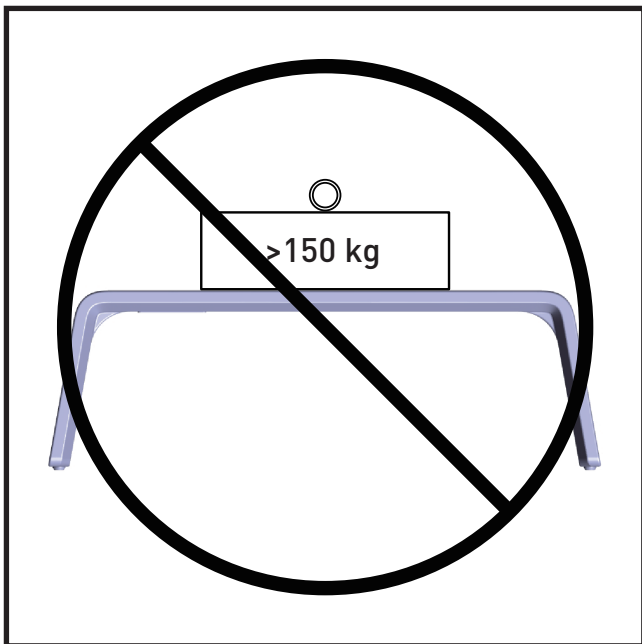

Maximum load capacity: 150kg.


Maximale Tragfähigkeit: 150 kg

Capacidad de carga máxima: 150 kg

Capacité de charge maximale: 150kg

Capacità di carico massima: 150 kg

Maximaal draagvermogen: 150 kg

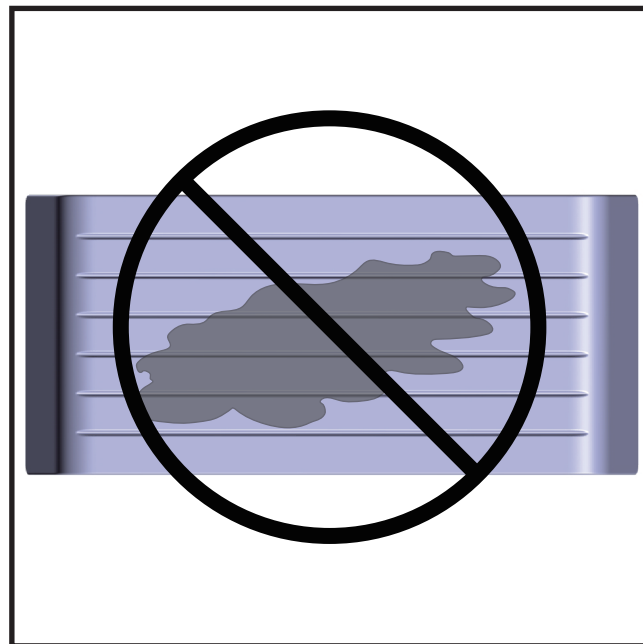

Keep the surface dry to avoid slipping.


Halten Sie die Oberfläche trocken, um ein Ausrutschen zu vermeiden.

Mantén la superficie seca para evitar resbalones.

Garder la surface sèche pour éviter de glisser.

Mantenere la superficie asciutta per evitare di scivolare.

Houd het oppervlak droog om uitglijden te voorkomen.

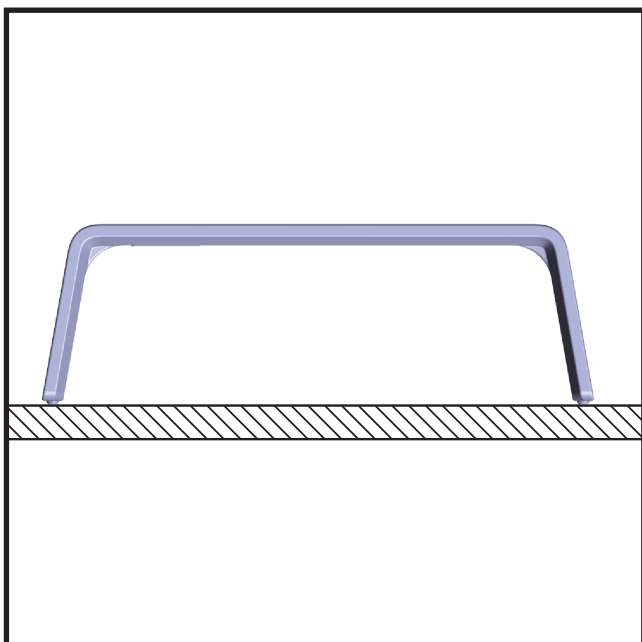

Place the Bath Step on a level surface.


Stellen Sie den Badetritt auf eine ebene Fläche.

Coloque el escalón de baño sobre una superficie plana.

Placez la marche de bain sur une surface plane.

Posizionare il gradino su una superficie piana.

Plaats de bad opstap op een vlakke ondergrond.

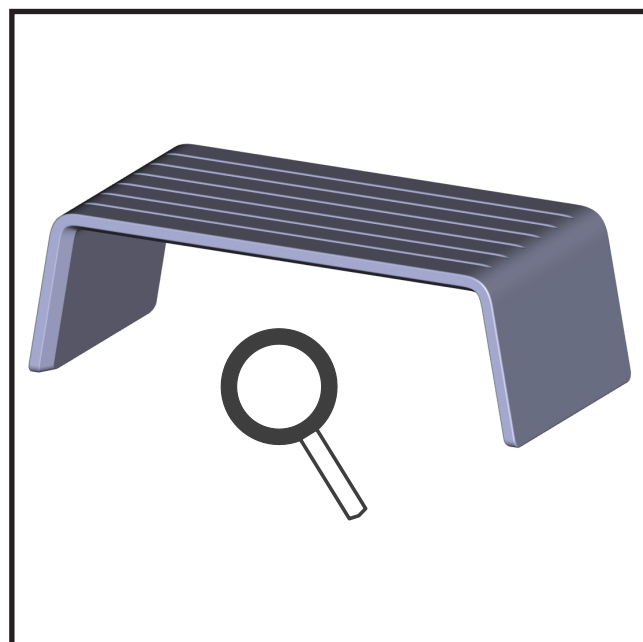

Inspect the Bath Step before use.

Überprüfen Sie den Badetritt vor dem Gebrauch.

Inspeccione el escalón de baño antes de usarlo.

Inspecter le marchepied avant de l'utiliser.

Ispezionare il gradino del bagno prima dell'uso.

Inspecteer de bad opstap voor gebruik.



Step firmly on the center of the step.

Treten Sie fest auf die Mitte des Tritts.

Pise firmemente el centro del escalón.

Marcher fermement sur le centre de la marche.

Appoggiare saldamente il piede al centro del gradino.

Stap stevig op het midden van de trede.

United Kingdom

VICTORIA & ALBERT BATHS LTD
Fortune Brands Innovations Building
2 Pioneer Way, Wolverhampton, WV9 5FH
United Kingdom

Europe

VICTORIA & ALBERT BATHS LTD
C/O AQUALISA INTERNATIONAL B.V.,
Jan Palfijnstraat, 8500 Kortrijk
Belgium

Riobel

PERRIN & ROWE
LONDON



victoria ⊕ albert®

ROHL