
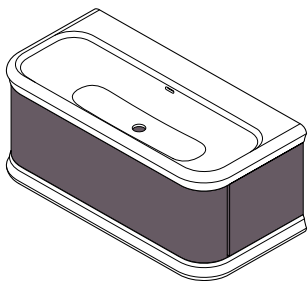


# Lario

victoria ⊕ albert®

volcanic limestone baths

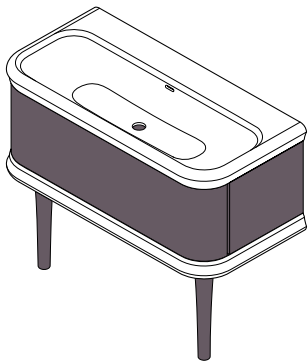


Fitting instructions  
Notice d'installation  
Instrucciones de montaje  
Montageanleitung  
Istruzioni di montaggio  
Montagehandleiding  
Instrukcja montażu  
Указания по креплению




rich in  
volcanic  
limestone

[www.vandabaths.com](http://www.vandabaths.com)


## LAR-N-100-\*\*-IO/LAR-3TH-100-\*\*-IO

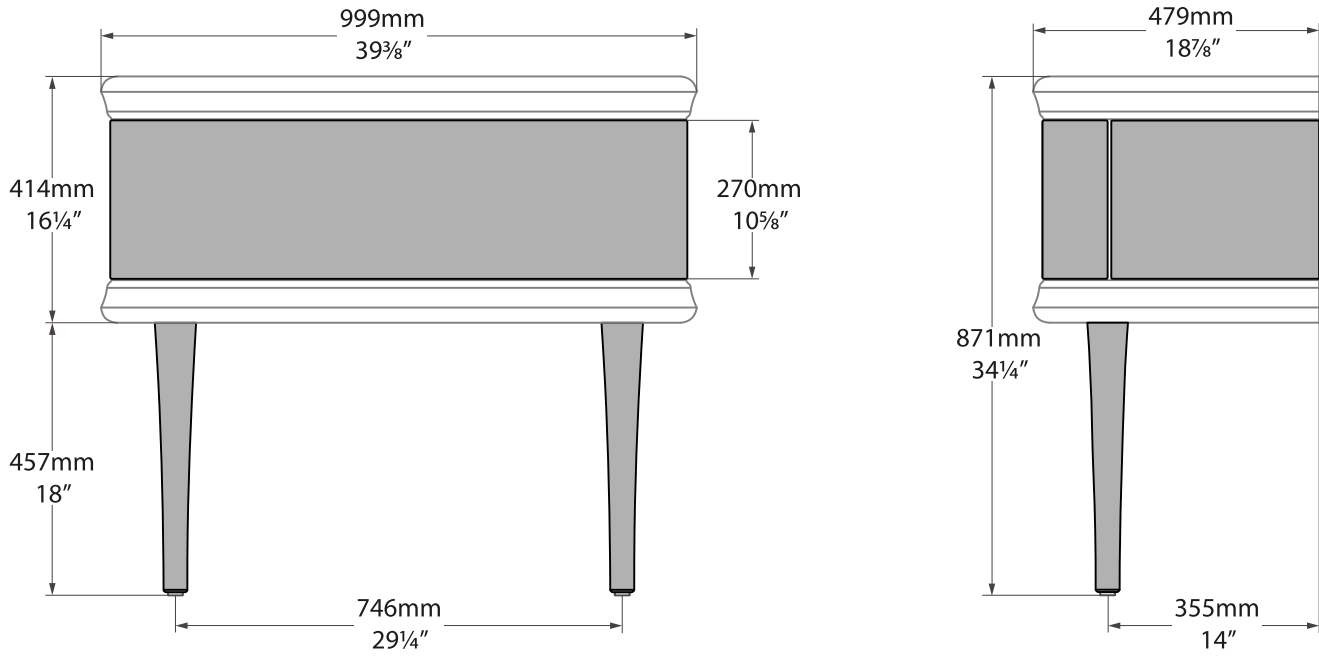

## LARV-N-100-\*\*-IO/LARV-3TH-100-\*\*-IO

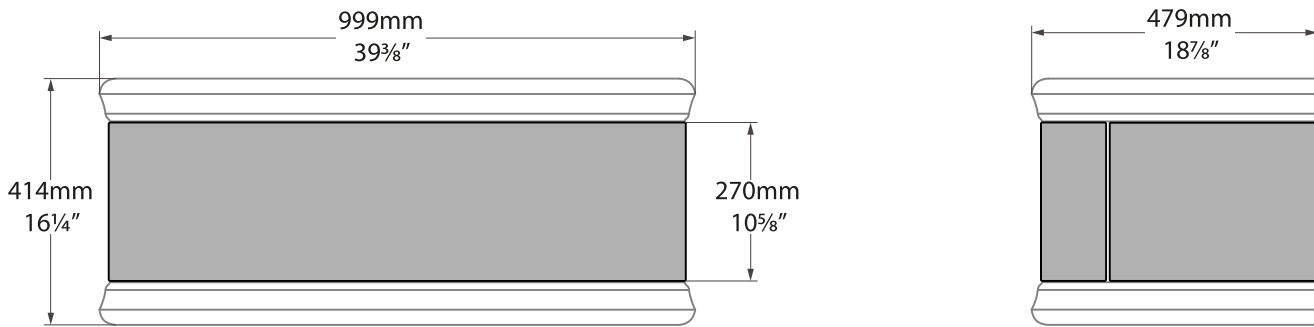

## Rear View

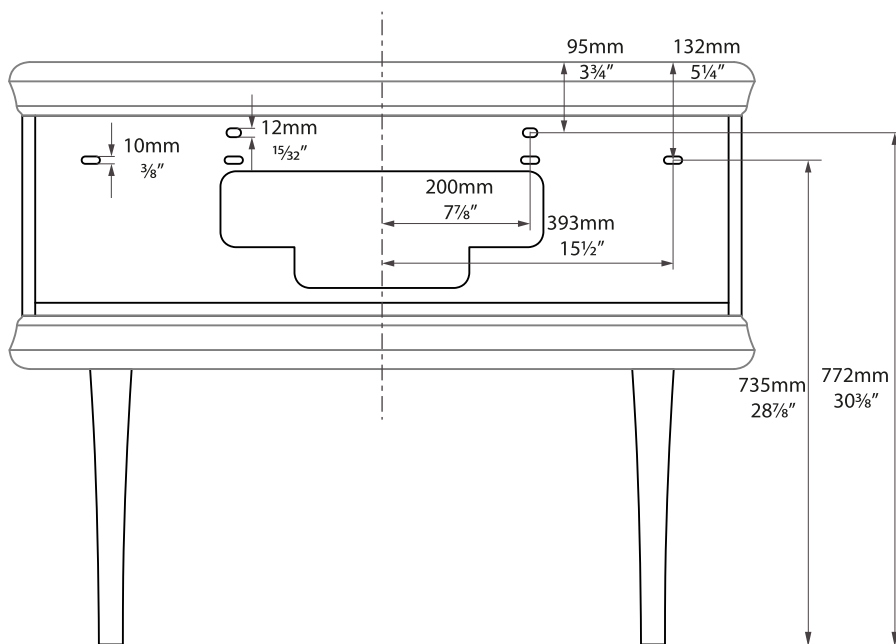



\*All measurements subject to +/- 5% tolerance


- ! Check wall is sufficient to take weight and use the appropriate fixings (not supplied). Wall may need to be reinforced
- Victoria and Albert Baths recommend coach screws where possible when wall hung





1.

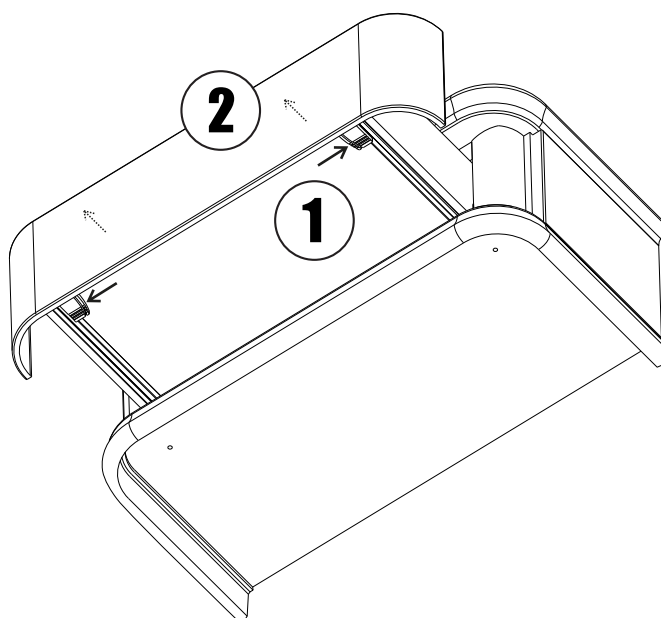


	LAR-N-100-**-IO	✓
	LAR-3TH-100-**-IO	✗
	LARV-N-100-**-IO	✓
	LARV-3TH-N-**-IO	✗

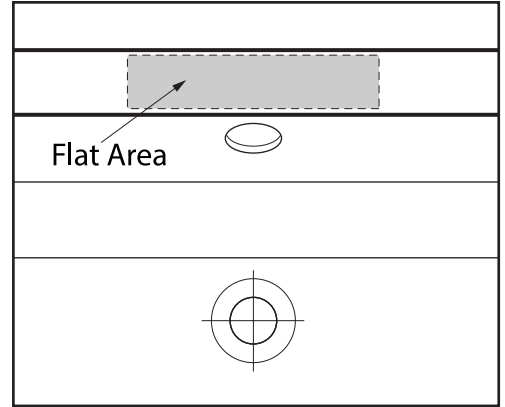

400 x 60mm  
15 1/8" x 2 3/8"

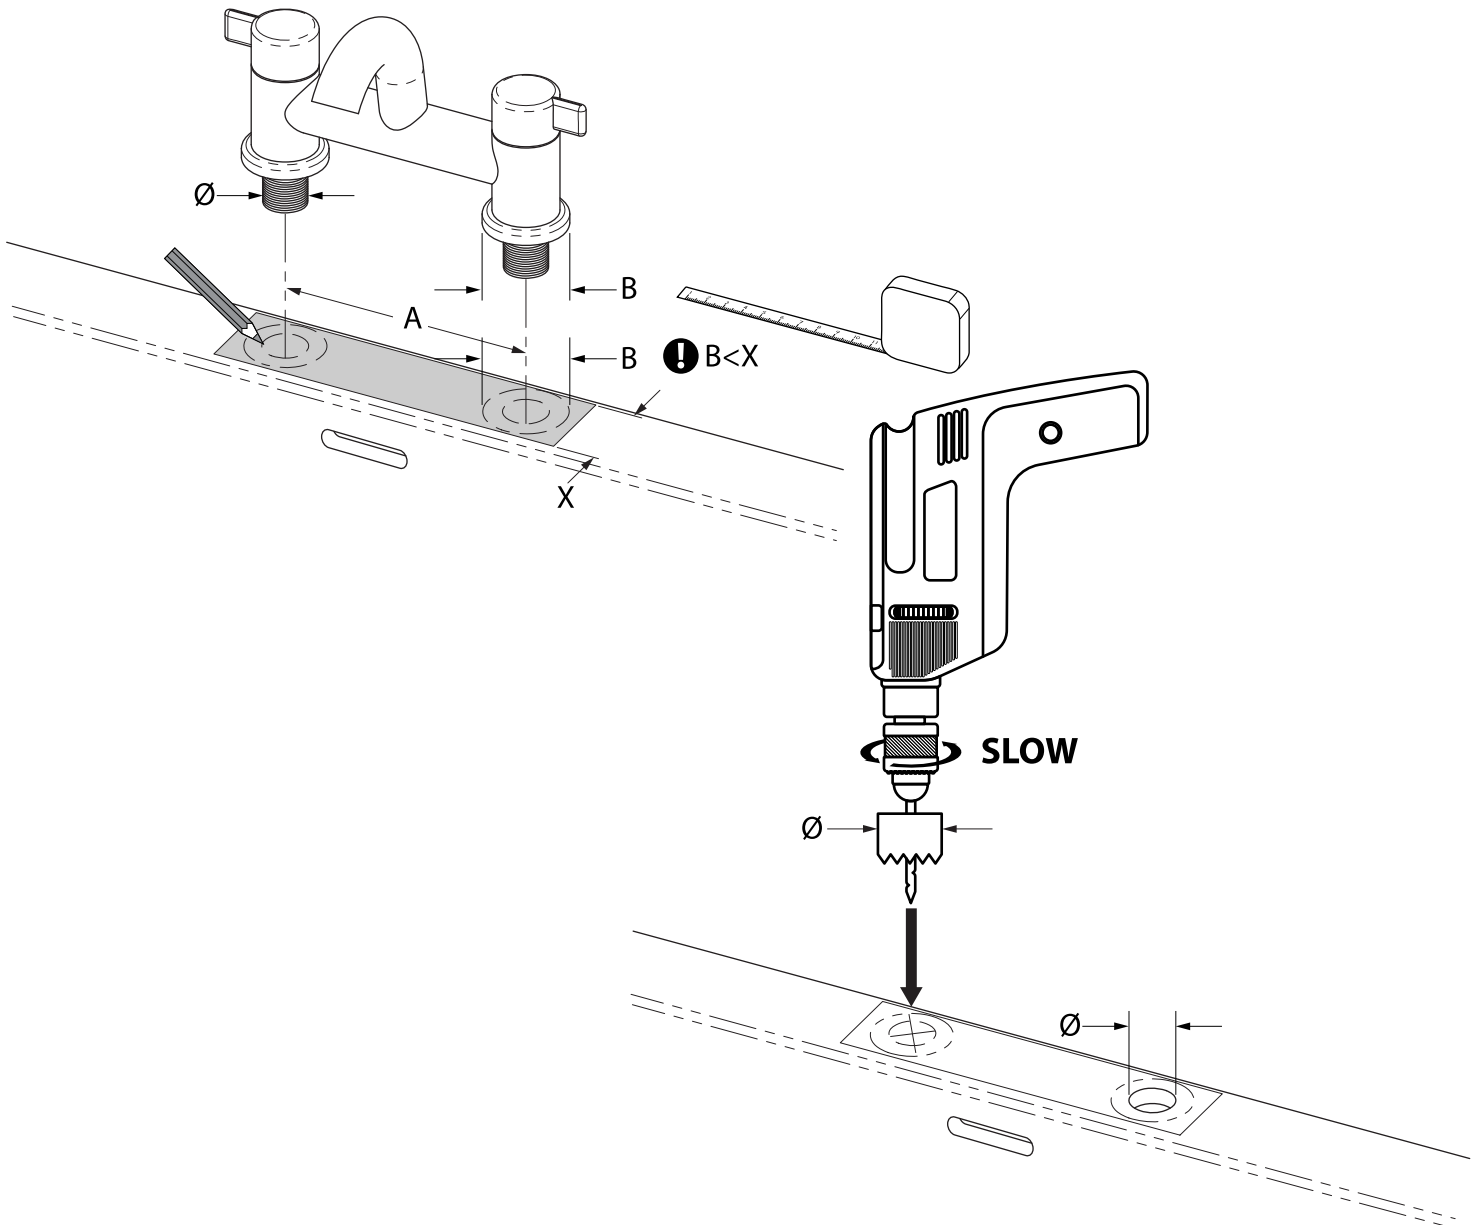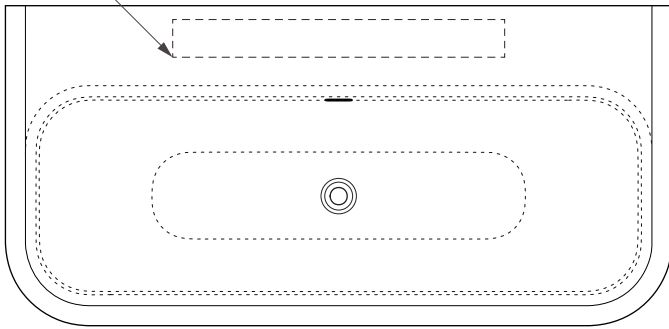

2a.

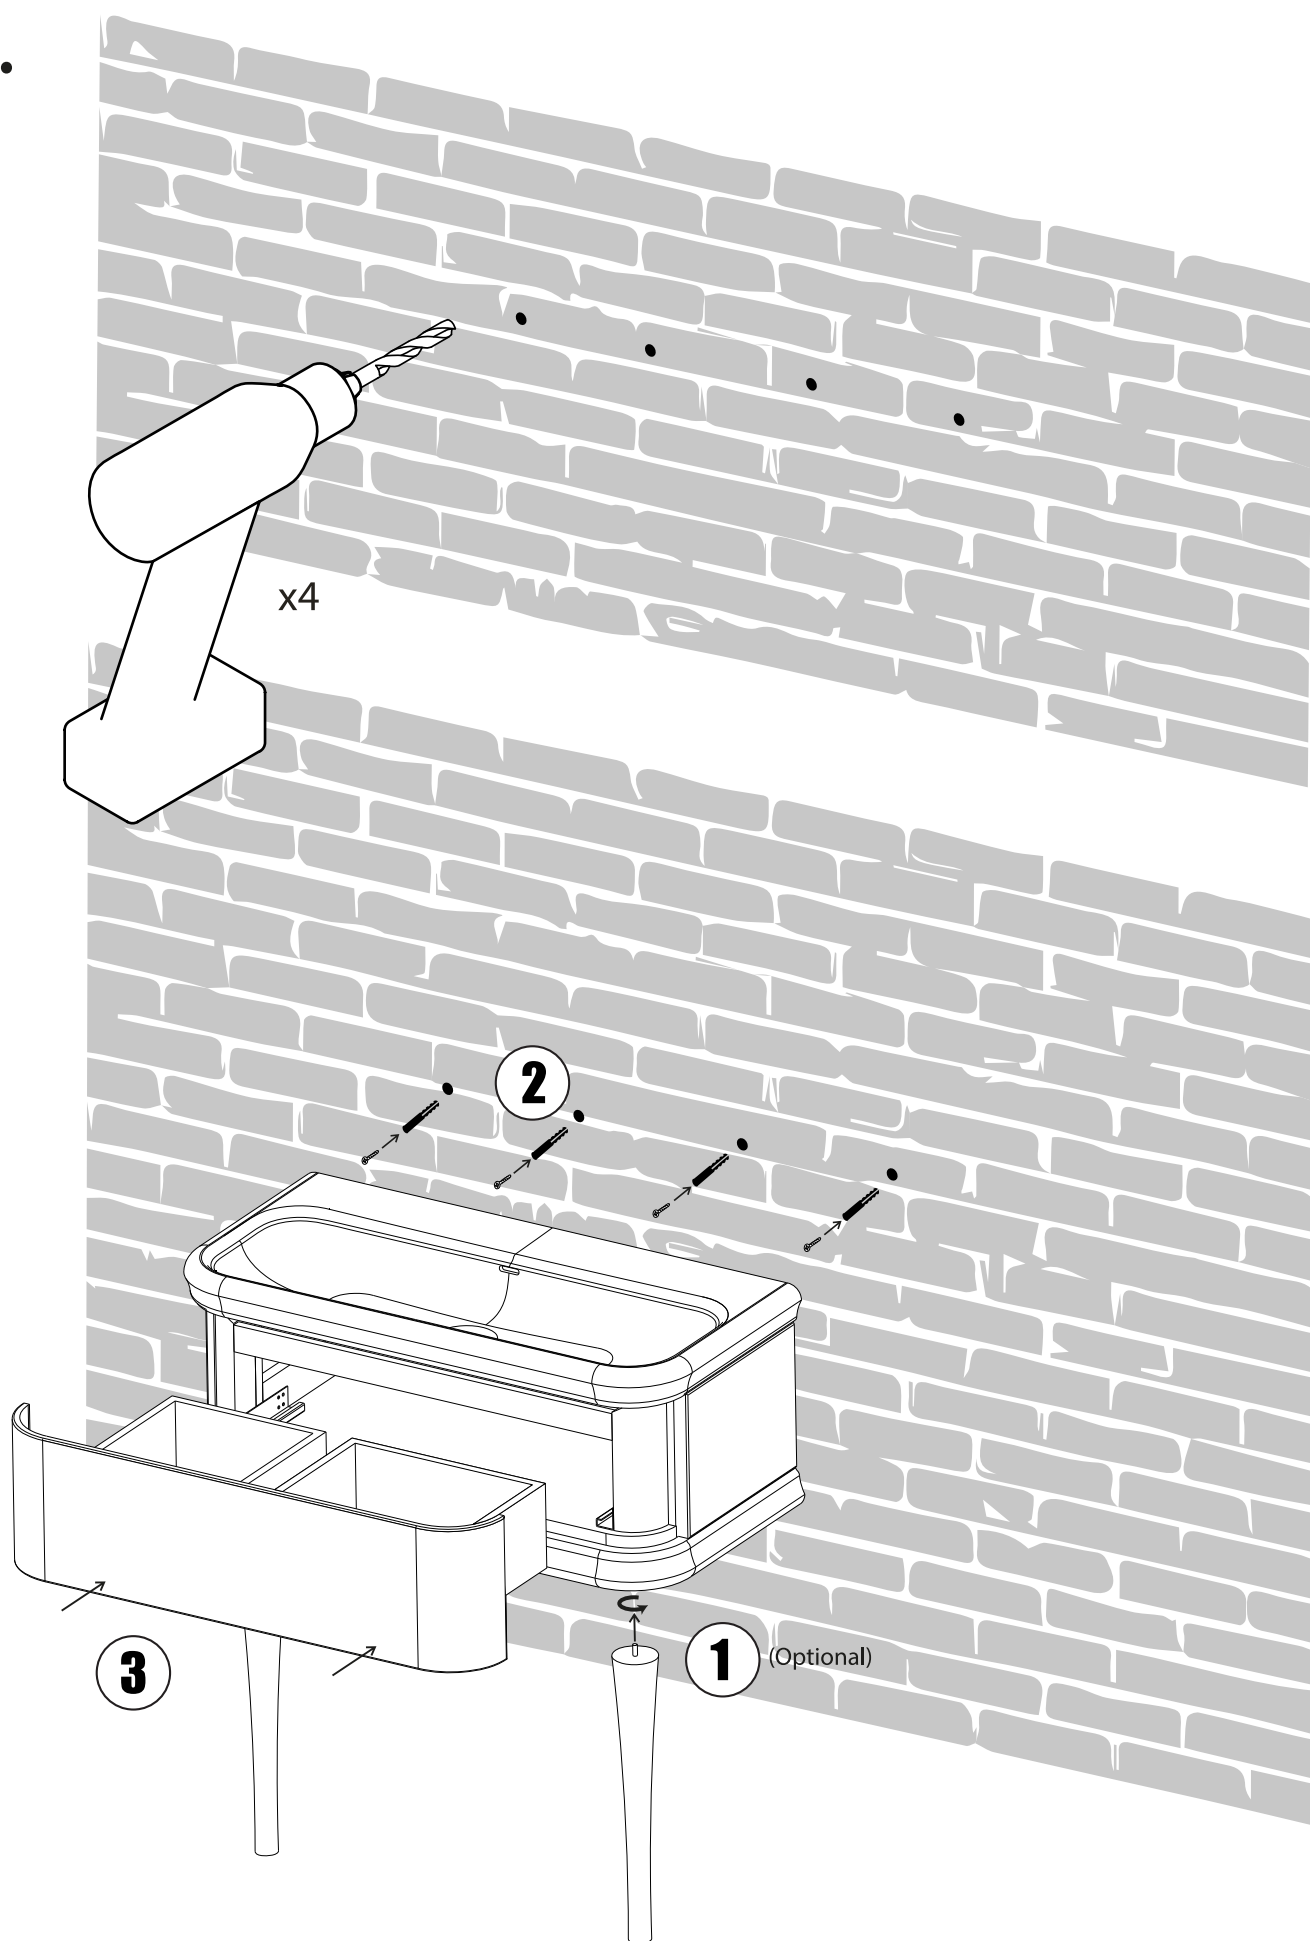

# 2b.

